


Instruction Manual for the *Airbrush™ Liposculptor and Intellimotion™ Controller*

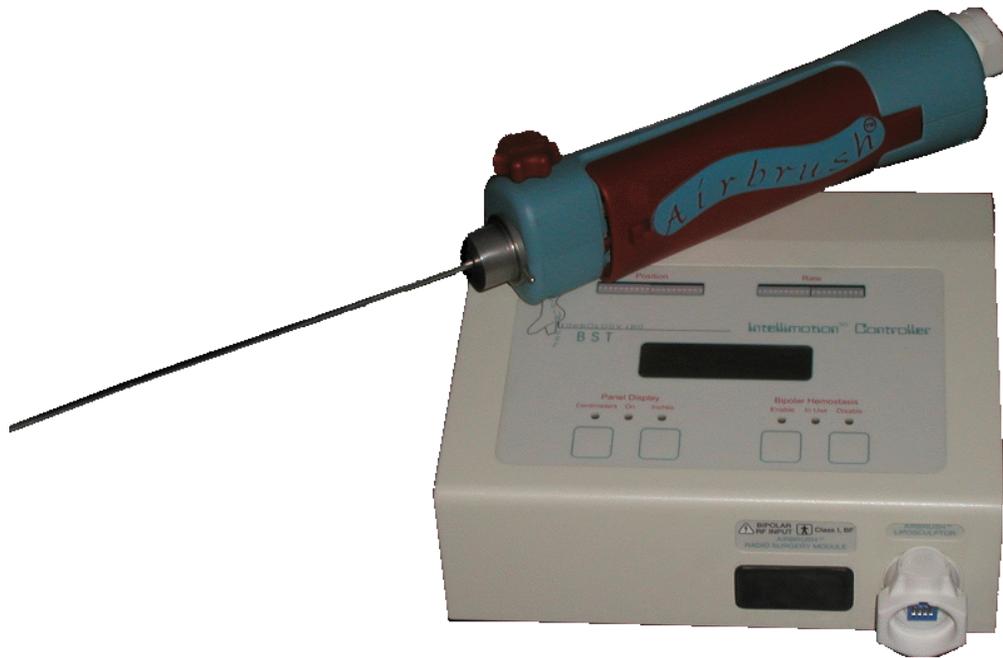

B
-
S
C
U
L
P
T
U
R
E

TECHNOLOGY, INC.

BST

TABLE OF CONTENTS^{1,2}

Introduction	2
Assembly	3
Cleaning	8
Sterilization	10
Routine Maintenance	11
Service and Repairs	11
Shipping and Transport	12
Disposal	13
Contact	13

¹All contents, © BioSculpture Technology, Inc., 2002-3.

² Rev 1/20/04

This manual describes the recommended procedures to maintain your *Airbrush™ Liposculptor* in optimal working condition. Throughout it two symbols are used to call your attention to required precautions:



- **WARNING:** This symbol indicates that the safety of the patient, surgeon or hospital personnel could be jeopardized.



- **CAUTION:** This symbol is used to indicate precautions or special procedures that must be followed to avoid damaging the instrument.

Introduction

The *Airbrush™ Liposculptor System* consists of a patented³ state of the art reciprocating handpiece, interchangeable twin cannulas, an *Intellimotion™ Power Control Console*, and a special multicore connecting cable. A variety of cannulas are available for the differing demands of regional liposculpture with and without the ability to enable bipolar hemostasis.

While operating, the rate of reciprocation and length of stroke of the inner cannula can be varied from 0 to 300 cycles per minute 0 and 10 centimeters respectively. The unit is pneumatic and powered by nitrogen or compressed air. It may be used with any standard vacuum source.



- Use of this device is limited to physicians who have attained proficiency in suction lipoplasty by means of formal professional training or sanctioned continuing medical education and supervised operative experience.
- Powered liposuction devices cannot produce significant weight reduction in and of themselves.
- Extreme caution is urged when liposuction is carried out in patients with diabetes, cardiac, pulmonary or circulatory impairment, or obesity.

³ U.S. Patents 5,112,302, 5,348,535, 5,643,198, 5,795,323, 6,346,107, 6,394,97, 6,652,522, EPO 94306845.2 and multiple other patents pending



- The volume of blood and/or endogenous body fluids lost must be monitored with timely and appropriate replacement to avoid hemodynamic compromise of the patient in the intraoperative or postoperative period.
- If used, tumescent solution must be administered in a controlled manner to avoid fluid overload or anaesthetic overdose.
- This device is designed to contour the body by removing localized deposits of fat through small incisions.
- Results of this procedure will vary depending upon the patient's age, patient's condition, the surgical site treated, and the skill and experience of the physician.
- Fat removal should be limited to that necessary to achieve a desired cosmetic effect

Assembly

Pressurized Gas Source


Airbrush™ Liposculptor can be operated on either compressed nitrogen or compressed air. Compressed air should be dried and filtered to 3 microns to avoid residue that may damage the system or shorten its lifespan. Medical grade or "H" tanks are suitable.

If a reservoir compressor is employed, the reservoir should be bled of condensation prior to each use.

Air Pressure

The system is designed to operate reliably between 75 and 100 PSI as indicated on the **instrument pressure gauge** (2 on the diagram), that valve seated on the regulator that is closest to the instrument. Set the pressure to show 95 PSI while the unit is in operation at full throttle.

Once the valve atop a non-empty tank of gas is opened, the **tank pressure gauge** (1 on the diagram) that closest to the tank, should show at least 500 PSI or it should be replaced. Pressures above 100 PSI should not be employed.

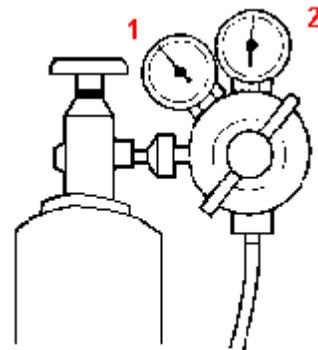



- Do not turn on the instrument pressure until the hose has been connected from the regulator to the Power Control Console



- Operating pressures over 100 PSI may harm system components.

Multicore Connecting Cable

Insert the quick connect multicore connector between the instrument and the power control console. Do not attempt to sterilize the disposable connection cables as they are not meant for reuse. The plug is keyed so it may only be inserted in one position, please do not attempt to force it.

Intellimotion™ Power Control Console

Attach the power cable from the back of the unit to a grounded outlet and plug the other end into a grounded receptacle. Do not turn the power control console on until all pneumatic connections have been made between the console and the instrument and gas source.




- Unattached gas lines can whip around and be injurious to operating room personnel.
- Never pressurize a system or turn on the console until all connections have been made secure.

Cannula and Suction Tubing


The *Airbrush™ Liposculptor* can operate with any of the standard suction tubing employed in liposuction. We recommend standard 0.5” outer diameter tubing. To prepare your instrument for surgery or change cannulas please follow the prescribed sequence:

1. After proper connections have been made as described above, turn on the controller and wait until the panel display indicates the handpiece is ready for use.
2. Position the carriage for cannula changing by turning the Rate knob counterclockwise all the way to zero, “off”, and turning the Stroke knob clockwise all the way to absolute maximum. This combination setting alone positions the carriage at the back of the hand piece in **cannula change position**.


3. Firmly attach the vacuum tubing to the barbs on the hub of the chosen inner cannula. Slide the tubing onto so that it is securely fastened.
4. Insert the inner cannula, with vacuum tubing firmly attached, into the hole at the back of the hand piece above the multicore connector oriented with the flat side of the inner cannula hub facing down towards the multicore connector.
5. Without rotating it or changing its orientation, gently push the inner cannula inwards so that its tip emerges at the front of the instrument. Using the vacuum tubing for the last centimeter of insertion, it will securely snap into place.
6. If you encounter any resistance or it does not snap into place with gentle pressure, it has rotated out of proper alignment. Simply remove it, make sure the vacuum tubing is firmly attached, and reinsert it so that the flat side faces the multicore plug. Please note that for ease of visualization of the inner cannula hub orientation, the vacuum tubing is not shown on the following illustration.

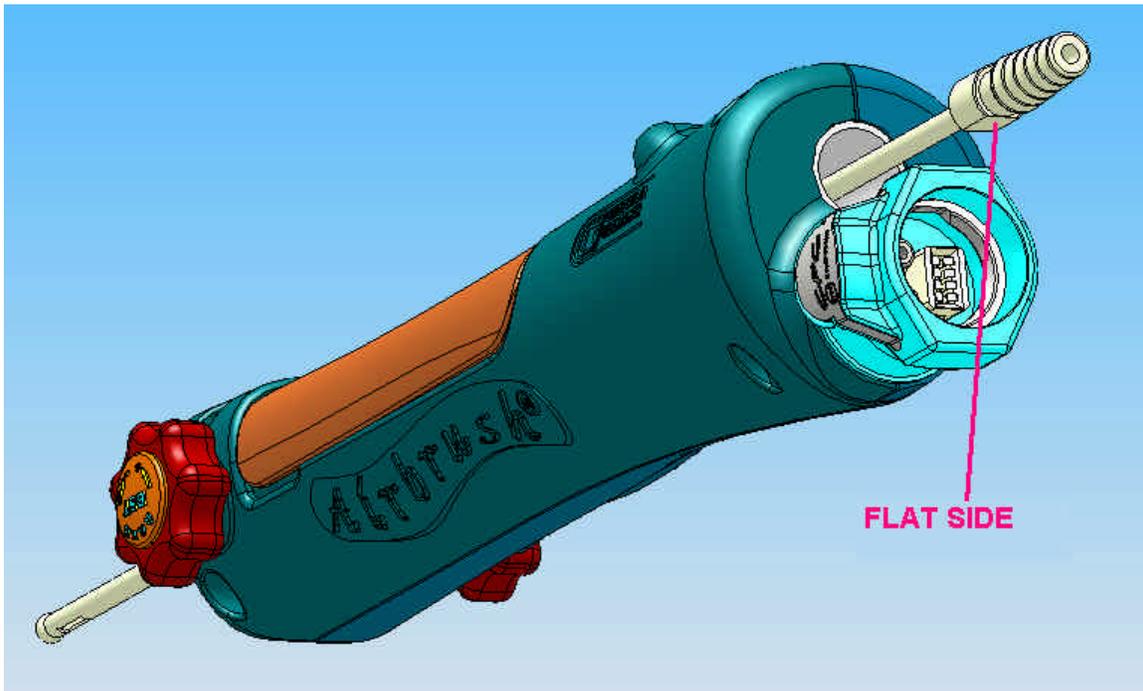


7. Once the inner cannula is firmly seated and snapped into position, slide the matching outer cannula over the inner cannula with the pin oriented in the center of the trigger until the outer cannula hub fits over the mount and rotate the then pin towards the rate knob to secure it.
8. Your *Airbrush* \hat{O} *Liposculptor* is now ready for operation, set on maximum stroke, awaiting Rate to be turned clockwise and increased from zero.
9. During operation, reduce the stroke to that which gives you desired stroke without unnecessary vibration or overstroking.

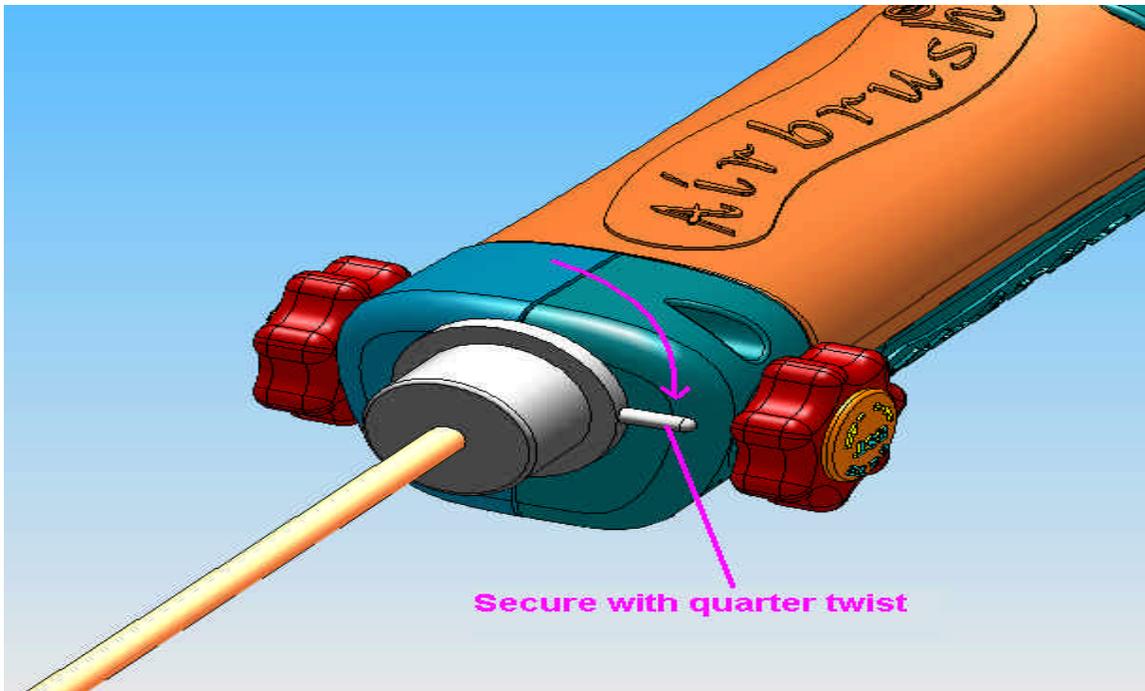

10. There is no need to open the trigger door for any of the above steps but if you prefer to insert the cannula under direct vision or should the vacuum tubing become detached during operation, you can open the trigger but elevating the tab near the rate knob; the latch will automatically spring shut.

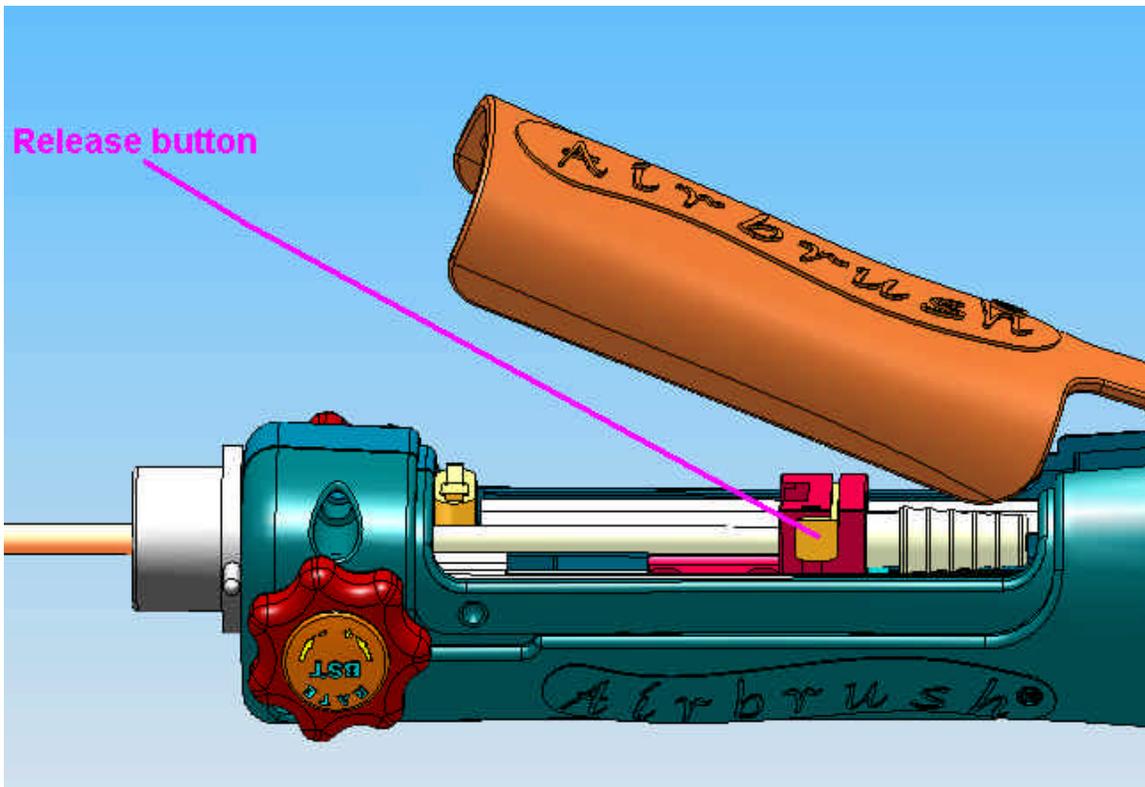

11. At any time the inner cannula can be “popped” out by pointing the outer cannula up and pressing the cannula release button at the back of the instrument by first putting the carriage in the **cannula changing position**.

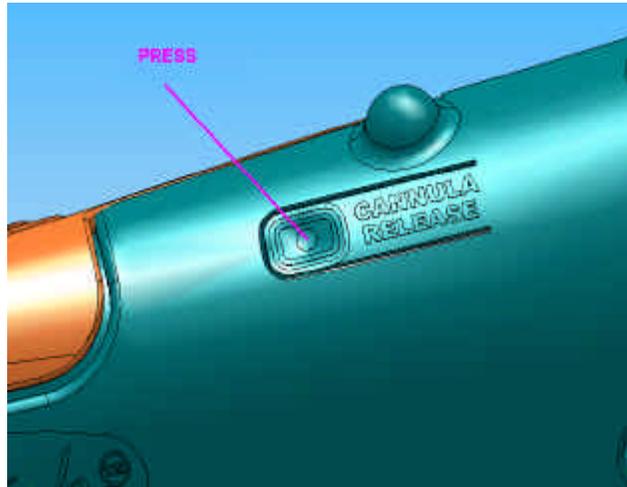

12. You can gently pull on the vacuum tubing while depressing the button if necessary or even depress the release tab directly with the trigger open if you prefer.

13. To remove the cannulas or to change to a different set of twin cannulas, first remove the outer cannula by rotating the hub so the pin faces the trigger and sliding it off, then remove the inner cannula as directed above and repeat the insertion steps.

Handpiece

The *Airbrush™ Liposculptor* contains the latest space age components and motion control technology. Although it contains both hardware and software safeguards against careless use you are advised to observe good operating procedures and avoid dangerous practices:



- Never attempt to power up the unit when the cannula housing is open. The carriage will move as the unit is programmed to self-calibrate on power-up or after power interruption and lock the carriage in the forward position for ease of cannula insertion.
- Never lay down the unit until you have turned both rate and stroke completely to zero and allowed the carriage and/or the inner cannula to completely come to rest. At a slow rate of reciprocation there may be a slight delay.



- Avoid total immersion of the instrument either before or after the surgical procedure. Follow the instructions given in ***Cleaning and Sterilization*** below.

Turning the stroke knob counterclockwise reduces the stroke length and when it is reduced to zero, turns the instrument “off” and positions the inner cannula in the forward most position for manual liposuction or temporarily putting the instrument down.

Increasing the rate by turning the Rate knob clockwise turns the trigger turns the instrument on and increases the rate from zero to maximum provided the stroke is not set at zero. Either zero stroke or zero rate turn the instrument “off.” If stroke is set to zero, the inner cannula is automatically positioned and locked at its foremost position (**manual liposuction position**) except if stroke is set to absolute maximum, in which case the carriage is locked at the back of the hand piece in **cannula changing position**. It is only in this only position when the button on the left hand housing (shown in the figure above) overlaps the cannula removal latch on the carriage and allows cannulas to be “popped out” by pressing that button without opening the chamber.

The end-of-stroke cushioning is set at the factory at the default preferred by most surgeons to provide sufficient feedback for stroke awareness without undue vibration. Your manufacturer’s representative is able to customize the setting to your taste if you prefer to have even more stroke awareness or none at all.

If the inner cannula should encounter hard tissue or is subjected to too much friction by to much bending of the outer cannula, the **carriage safety mechanism will cause it to disengage** and preclude further operation. When the pressure or blockage is removed, the inner cannula may still reciprocate but motion will be slower than normal or with an incomplete stroke. Turn the stroke knob all the way counterclockwise and slide the trigger latch forward. Open the trigger door and push the carriage atop the cylinder all the way to the front of the cylinder. You will hear a snap and the magnets will have reengaged. You can then close the trigger door, latch it, and proceed with surgery.



- Never use an inner cannula without an overlying outer cannula securely snapped in place.



- Use **only certified Airbrush™ Liposculptor** cannulas with the system to avoid damaging the system or possible injury to yourself or the patient.

Cleaning

Dried blood, saline, and other deposits inside the cannula housing are a major cause of equipment malfunction. Proper cleaning and inspection prior to sterilization will avoid unnecessary delays and the need for instrument repairs.

Please follow the following procedure for routine cleaning and decontamination of the instrument before sterilization. If the instrument was not being used, you can proceed directly to (5).

1. First remove the outer and inner cannulas as directed above. Cannulas can be totally immersed and cleaned in gentle detergent (e.g. Ivory) and water cleansed internally with the aid of a non-worn pipe cleaner. Avoid the use of steel wool as

it can damage their surfaces as can pipe cleaners that have lost their brushes. Turn the knob on the gas tank “off” and run the instrument to bleed the gas lines.

2. Turn the knob on the gas tank “off” and run the instrument to bleed the gas lines. Remove the hose from the regulator and the *Intellimotion™ Power Control Console*. Remove the hose from the regulator and the *Intellimotion™ Power Control Console*.
3. Remove the quick connect multicore connector from the Power Control Console but leave it connected to the back of the instrument as a safeguard from water entry into the cylinder.
4. Unlatch the trigger, open the trigger door, disconnect the vacuum tube, lift the inner cannula out of the carriage by gentle upwards pressure, and slide out the inner cannula from the instrument.



- Do not totally immerse the instrument in any liquid or allow any liquid to enter into the cylinder by way of the quick connect multicore plug at the rear of the hand piece.



- Do not ultrasonic clean the hand piece, multicore cable assembly, coated or disposable cannulas..

5. Clean the handpiece thoroughly with warm water, mild detergent (e.g. Ivory), and a soft brush. Pay particular attention to any debris caught in crevices. With the multicore connecting cable still attached, rinse the handpiece under running water to remove all traces of detergent. If possible use distilled water for the final rinse.
6. Dry the hand piece with a lint-free towel, remove the multicore cable from the instrument, and allow the handpiece to dry.
7. Discard any disposable multicore cable at this point and proceed to clean any reusable cannulas with a small cannula brush and a gentle detergent. Rinse and dry the cannulas as described above. Cleanse, rinse and dry the multiple use silicone multicore connector if one was used.
8. Once the instrument is dry, after approximately every fourth use, you can open the trigger door and **sparingly** spray the exposed cylinder on either side of the carriage with the *BioSculpture Instrument Lubricant*, gently sliding the carriage back and forth to assure complete lubrication. **Very little lubricant is needed**; afterwards wipe clean with a soft, lint-free cloth. Lubricant should be used on instrumentation after cleaning and prior to autoclaving.

Accidental Immersion

Should the instrument accidentally become immersed in disinfectant, cleaning fluid or any other corrosive substance, damage can be minimized by carrying out the following steps:

1. Briefly immerse the hand piece in distilled water for 60 seconds to dilute and remove any residue.
2. Connect the instrument to a pressurized gas source and run the hand piece (no cannula is necessary) for five minutes.
3. Autoclave the instrument to remove any remaining moisture.
4. Apply **BioSculpture Instrument Lubricant** to the cylinder as described above and return the instrument to BioSculpture for service.

Sterilization

Steam autoclaving shortens the lifespan of all powered instruments; however its effects can be lessened by using distilled water and double-wrapping the handpiece or sterilization case to filter out contaminants during autoclaving.

Do not seal the hand piece in a peel pouch. All instruments should be pre-cleaned before sterilization by the above procedures; do not immerse the handpiece in any liquid. Do not attempt to sterilize disposable cannulas or single use multicore connecting cable.



- Do not flash autoclave!



- Do not run the instrument while warm. Cool by exposure to room temperature. Do not immerse in liquid to cool.

Please follow the recommended sterilization procedures for BioSculpture Systems to ensure optimal functioning.

Prevacuum Steam Sterilization

Set exposure time to 4 minutes at 270° F (132° C) and drying time to a minimum of 8 minutes.

Gravity Displacement Sterilization

Set exposure for 18 minutes at 270° (132° C) and drying time for a minimum of 8

minutes

Routine Maintenance



- The instrument should be cleaned according to the directions provided above before storing and between usages. The cylinder should be lubricated after cleaning with **BioSculpture Aerosol Lubricant** approximately every fourth usage.



- **There are no user serviceable parts within the Instrument hand piece or Controller.** Other than the replacement of a blown fuse the user is advised against opening the controller as it will expose the user to a danger of shock and void any outstanding warranty.

Service and Repairs

In-Hospital Service

All powered instrumentation should be inspected and periodically tested in keeping with the bioengineering protocols of each facility. Service records should be maintained.

Periodic Inspection

Periodic inspections and factory-authorized service is essential to the maintenance of powered instruments. If repairs are indicated, they can be carried out quickly with rapid turn around times.

Because of the stressful nature of surgical usage, decontamination and sterilization, BioSculpture recommends that all equipment be returned to the factory for routine inspection and service at least once every two years if subject to light usage and once a year if subject to heavy usage. There is no charge for this service during the warranty period.

Warranty

All instruments pass a series of rigorous tests to make sure they will perform as expected under the rigorous demands of surgery. **BioSculpture Technology, Inc.** warrants its *Airbrush*[™] **Liposculptor Systems** to be free from defects in material and workmanship in their manufacture for a period of 6 months from the original purchase date by the end customer. This warranty is limited to the repair or replacement of the

product without charge. The warranty is voided in the event of abuse, misuse, use in any other than a normal surgical environment, or in the event of disassembly, alteration, unauthorized repair, or noncompliance with the written instructions furnished by the manufacturer. This limited warranty covers both parts and labor but not shipping or insurance.

All other expressed or implied warranties or other warranties of fitness of merchantability are excluded here from and the manufacturer shall have no liability of any kind for incidental or consequential damages.

Following the recommended procedures will help preserve your warranty as well as the life of your instrument.

Extended Warranty

An extended warranty is available on all BioSculpture instruments. If the purchase warranty has expired, all BioSculpture instruments must first be inspected and, if necessary, restored to a fully serviceable condition before being eligible for an extended warranty.

Should there be a problem at any time, whether or not a warranty is in effect, our technicians can rapidly assess the damage, make repairs, get you a replacement unit if necessary, and return your instrument back to you in working order in the shortest possible time.

Service

You may contact our ***Service Department*** for instructions on returning an item to the factory. To avoid biologic dangers to receiving and service personnel, all instruments which have been employed in surgery are to be first cleaned and sterilized before returning and accompanied by physician's certification that the instrument has been sterilized after use.

Telephone	(212) 977-5400
Telephone Facsimile	(212) 586-9529
E-Mail	<i>service@biosculpturetechnology.com</i>

Shipping and Transport

Shipping and transport of the instrument and controller should be accomplished at temperatures between +10°C and +40°C, in a non-condensing environment, and at

conditions with less than 93% relative humidity. Any shipping containers should be externally marked to ensure observance of these precautions and protection of the fragile contents within.

The original storage case in which the unit shipped with its contoured foam is ideal for offering protection against ordinary hazards.

Disposal

If the unit is to be discarded, it should first be cleaned and sterilized to remove any dangers posed by virtue of contamination with biological waste and then disposed of in accordance with local laws describing the disposal of its metal and plastic components.

Contact

You may obtain the name of your regional manufacturer's representative from our E-commerce website or contact us directly.

BioSculpture Technology, Inc.
120 Central Park South
New York, N.Y. 10019

TEL: (212) 977-5400

FAX: (212) 586-9529

E-Mail: info@biosculpturetechnology.com

E-Commerce Sales: www.e-airbrush.us